

Slack rope switch, SLK-L, rope mounted

Normal

Activated

1. Fasten the contact to one of the ropes with this two clamps. The slack rope switch should be attached to the rope with a maximum distance of 50cm from the rope attachment on the car.

2. The second rope shall run free through this clamp.

3. Loosen these screws to adapt the switch to the distance between the ropes. The contact bridge should press 2-3mm on the contact springs when both ropes are tight.

4. If one of the ropes get slak, the spring presses the bridge out of the contact. The pressure can be increased by tightening the nylock nut.

○ = Rope

